

+ 86風潮開關&插座系列

■ 86 TYPE TRENDY SERIES



TLS051-2

86風潮一開關
86Type Sole Switch



TLS052-2

86風潮二開關
86Type Dual Switches



TLS053-2

86風潮三開關
86Type Trio Switches



TLS054-2

86風潮四開關(鎖線)
86Type Four Switches



TLS1525-2

86風潮一開關一單插座附接地
86 Type Sole Switch With Socket



TLS1511-2

86風潮一開關二單插座附接地
86 Type Sole Switch With Dual Ground Sockets Set



TLS1551-2

86風潮二開關一單插座附接地

+ 86興富開關 & 插座系列

86 TYPE WEALTHY SERIES



TSS031-2

86興富一開關
86Type Sole Switch



TSS034-2

86興富二開一體開關
86Type Dual Switches One Modular



TSS035-2

86興富三開一體開關
86Type Trio Switches One Modular



TSS041-2

86興富四路一開關
86Type Four Ways Switch



TSS1242-2

86興富一四路一開關
86Type Four Ways Switch with Sole Switch



TSS1325-2

86興富一開關一單插座附接地
86 Type Sole Switch With Ground Socket



TSS1311-2

86興富一開關二單插座附接地
86Type Sole Switch With Dual Sockets



TS1331-2

86興富二開關一單插座附接地
86 Type Dual Switches With Ground Socket


+ 86插座系列

■ 86 TYPE PLUG SERIES



TGC141-2

86萬用單插座
86 Type Sole Universal Socket

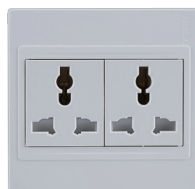

TGC142-2

86萬用雙插座
86 Type Dual Universal Sockets



TGC115-2

86單插座附接地
86 Type Sole Ground Socket



TGC116-2

86雙插座附接地
86 Type Dual Ground Sockets



TGC115E-2

86緊急單插座附接地
86 Type Emergency Sole Ground Socket



TGC116E-2

86緊急雙插座附接地
86 Type Emergency Dual Ground Sockets



TGC117-2

86節能雙插座附接地
86 Type Energy Saving Dual Ground Sockets



TGC118-2

86 20A節能雙插座附接地
86 Type Energy Saving Dual Ground Sockets 20A



TGC119-2

86雙插座附接地(附LED)
Dual Ground Sockets with LED



TGC120-2

20A雙插座附接地
Dual Ground Sockets 20A



TGC021-2

86冷氣插座
86 Type Air Conditioner Socket



TGC0A0-2

86USB充電插座
86 Type Sole USB Socket



TGC1A05-2

86 —USB—單插座附接地
86 Type USB Socket With Ground Socket



TGPU21-2

86連體雙USB充電插座—單插座附接地
86 Type USB Sockets set With Ground Socket



TGC0A1-2 / TGC0A1R-2

86電視插座(末端) / (中繼)
86 Type TV Socket



TGC0A2-2

86電話單插座(4C)
86 Type Tel Socket



TGC0A3-2 / TGC0A8-2

86網路單插座 (Cat.6) / (Cat.5)
86 Type Data Socket



TGC1A21-2 / TGC1A21R-2

86—電話插座—電視插座(末端)
86—電話插座—電視插座(中繼)
86 Type Tel Socket With TV Socket Set



TGC1A22-2

86 二電話插座
86 Type Dual Tel Sockets



TGC1A23-2

86—電話—網路插座



TGC1A31-2 / TGC1A31R-2

86—網路插座—電視插座 (末端)
86—網路插座—電視插座 (中繼)



TGC0C1-2

86電鈴押扣



TGC0C2-S2

86直式緊急開關(無段)
86 Type Stright Emergency Button
(Regained Type)



TGC0C2-H2

86橫式緊急開關(無段)
86 Type Horizontal Emergency Button
(Regained Type)



TGC0C2-SS2

86直式緊急開關(二段)
86 Type Stright Emergency Button
(Irreversible Type)



TGC0C2-HH2

86橫式緊急開關(二段)
86 Type Horizontal Emergency Button
(Irreversible Type)



TGC2C0

86節能開關(含卡片)
118 Type Energy Saving Key Card Switch



TGC2C0K

節能開關卡片
Key Card

新品即將推出
COMING SOON

86 廊道燈
86 Type Corridor Light